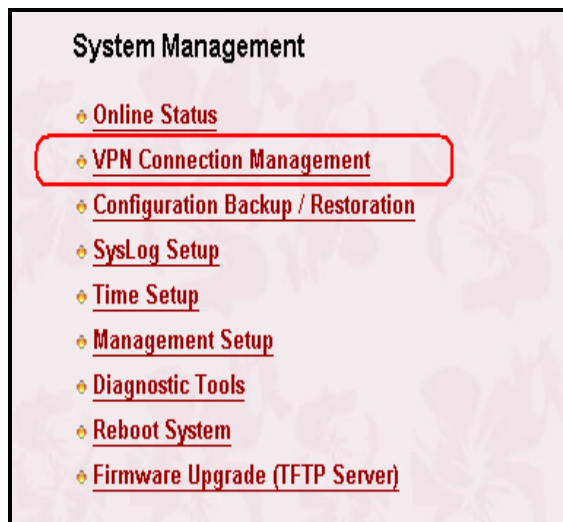

CHAPTER 14

Virtual Private Network Connection Management

14.1 Initiate a VPN connection

Once the VPN configuration is completed, any traffic from local LAN to remote LAN will trigger the VPN connection. Or you can use VPN Connection Management in System Management to direct "Dial" or connect a VPN from dial-out router. Once the link is up the VPN connection status/information will also show in VPN Connection Management page. A "Drop" button will let you to disconnect the link.



VPN Connection Management

Dial-out Tool Refresh Seconds : 10

(L2TP) 172.16.2.33

VPN Connection Status

| VPN | Type | Remote IP | Virtual Network | Tx Pkts | Tx Rate | Rx Pkts | Rx Rate | UpTime | |
|--------------------|-------------------------------|-------------|-----------------|---------|---------|---------|---------|------------|-------------------------------------|
| 1 (Vigor 1) | IPSec Tunnel AH-MD5 Auth | 172.16.2.26 | 192.168.2.0/24 | 13 | 3 | 39 | 3 | 0 : 4 : 10 | <input type="button" value="Drop"/> |
| 2 (Vigor 2) | IPSec Tunnel 3DES-MD5 Auth | 172.16.2.29 | 192.168.3.0/24 | 4 | 3 | 45 | 3 | 0 : 2 : 58 | <input type="button" value="Drop"/> |
| 3 (L2TPIPsec) | L2TP 3DES-MD5 Auth | 172.16.2.37 | 192.168.6.0/24 | 0 | 0 | 4 | 3 | 0 : 2 : 37 | <input type="button" value="Drop"/> |
| 4 (to Win2k) | PPTP/MPPE | 172.16.2.32 | 192.168.4.0/24 | 0 | 0 | 0 | 0 | 0 : 1 : 5 | <input type="button" value="Drop"/> |
| 5 (L2TP) | L2TP | 172.16.2.33 | 192.168.5.0/24 | 0 | 0 | 17 | 170 | 0 : 0 : 10 | <input type="button" value="Drop"/> |