CHAPTER 17

Time Setup

17.1 Introduction

The router has two different ways to set up time base: one is using computer time base via HTTP protocol and another is using NTP (Network Time Protocol) client to get time base from the time server. If you want to use any time-based function (for example, Call Schedule and URL Content filtering), the system time function should be worked properly in advance.


17.2 Configuration

17.2.1 Set Time Base Using Web Browser

 Before setting time base using web browser, you have to make sure whether the computer time is accurate or not. Login Web Configurator and then click Time Setup.



2. Select Use Browser Time and click OK button. Click Time Setup

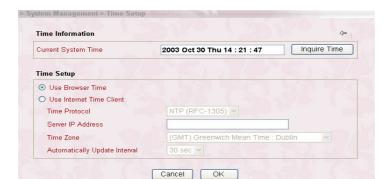

Copyright (c) 2004, DrayTek Corp. All Rights Reserv

again and push Inquire Time to set time base to the router.

3. The **Current System Time** block will display exact time information as your computer.

17.2.3 Set Time Base Using Time Client

- Before setting up the time base through the time client, you have to make sure if the time server is working properly. If the time server is located at the Internet, you should also make sure the router has Internet access capability. Login Web Configurator and then click Time Setup.
- 2. Click Use Internet Time Client, choose Time Protocol as NTP, specify an IP address of time server for the Server IP Address, choose an adequate time zone in the Time Zone and in turn select an updated time interval in Automatically Update Interval. The following picture shows an example.

Time Setup



3. Click **OK** button, wait for few seconds, and then the time client will get time base from the specified time server. Click **Time Setup** again to check **Current System Time** information as shown below.

